 





Contents:

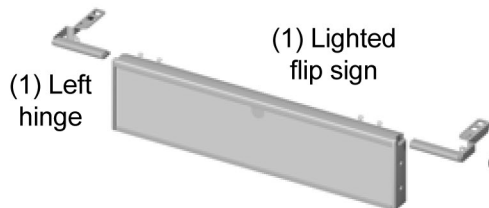


(3) Cord clips

(3) Divider strips

(2) #8-32 x 3/8"
Machine screw





(4) Cable ties

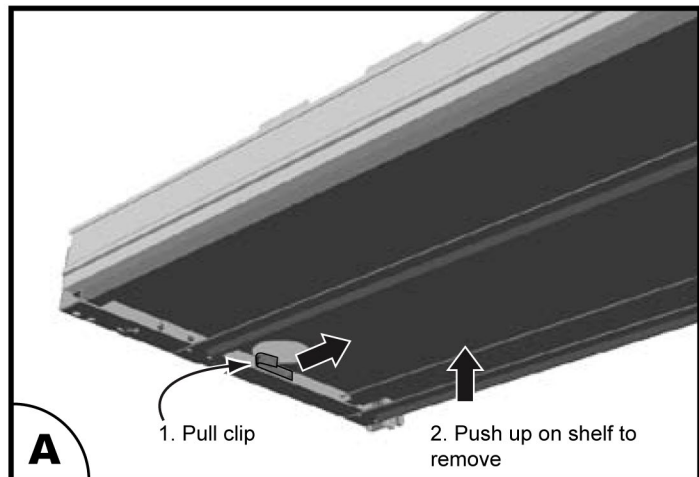


Warning: Unplug and turn off power before installing or servicing.

Warning: Do not overtighten cable ties. This will damage power cord insulation.

1. Before flip sign can be attached to the shelf frame, the shelf needs to be removed from the shelf frame. Reach under shelf frame and pull the spring clips back slightly, Push up on the shelf and remove. Set shelf aside during flip sign installation (Fig. A).
2. Slide left and right hinge into channel in top of the flip sign. Locking screws may need to be loosened (Fig. B). **For 1' flip sign, see note below.**
3. Position flip sign hinges to the correct width so as to engage the support tabs located on the underside of the shelf frame (Fig. C).
4. Engage the support tabs in the rear square opening on the hinges. Push the hinges all the way in. Use the securing screws to lock the hinges in place (Fig. C).

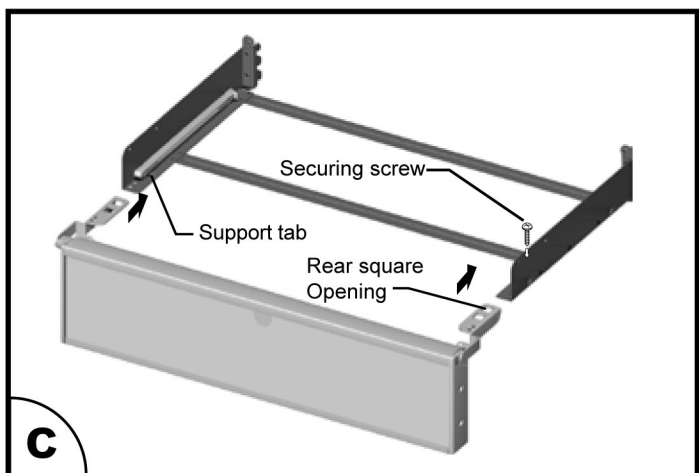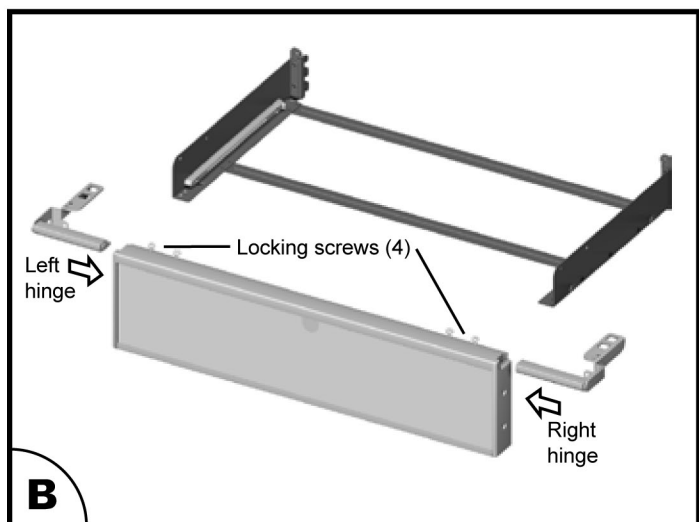

Note on 1' flip sign:




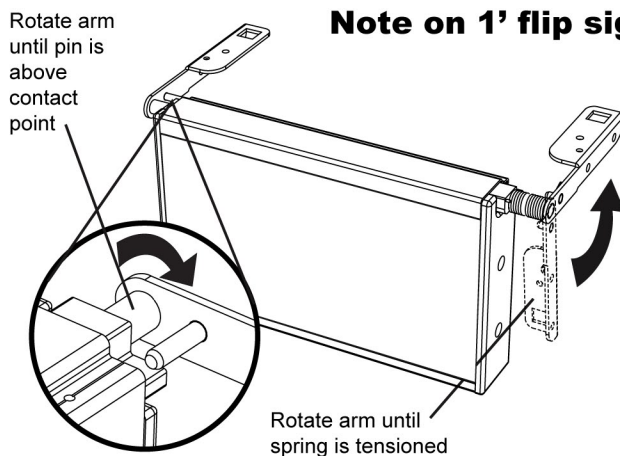




TheCStoreEstore.com

Questions? Call 866.630.2100

Lighted Flip Sign

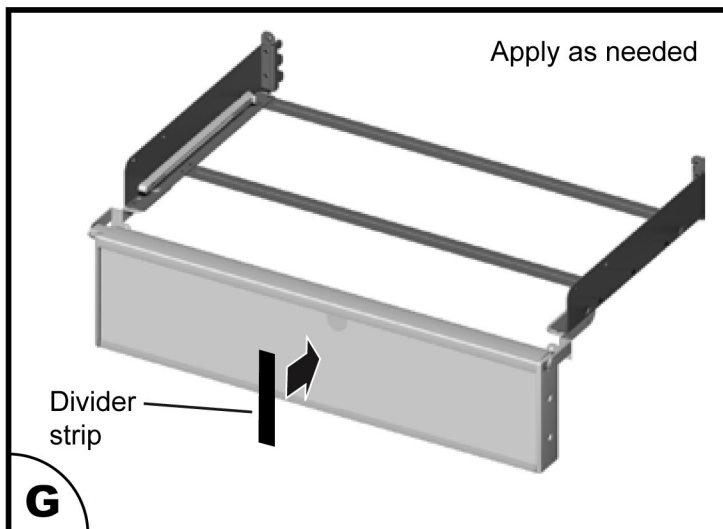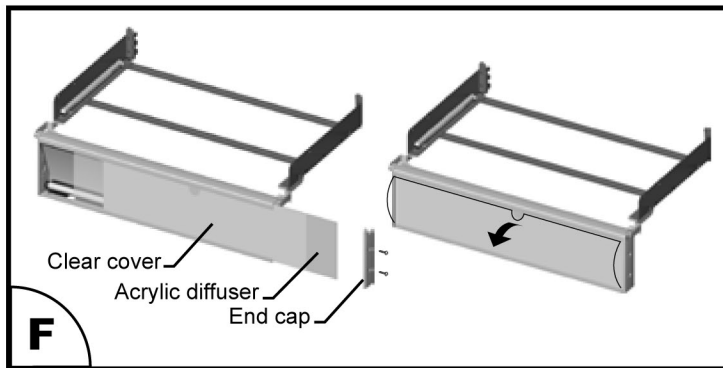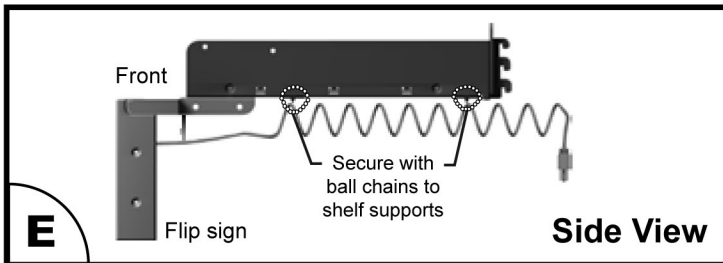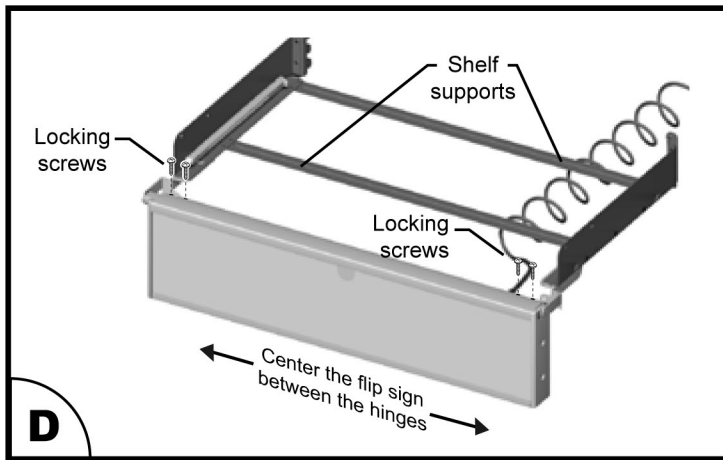


5. Center the flip sign between the hinges. Tighten (4) locking screws through the top of the flip sign and into each hinge (Fig. D).
6. Pull coiled power cord slightly, applying light pressure on the cord. Secure to both the middle and rear shelf support straps with ball chains. Route remainder of cord. Use cable ties and cord clips to secure as needed. See installation sheet "Power Cord Routing" (Fig. E).
7. If shelf has been removed from the shelf frame, reinstall the shelf onto the shelf frame. Pull out on the spring clips, position shelf and release spring clips.
8. To insert or change the graphic transparency, pull the clear cover down and out of the top slot. Insert transparency and reinstall the clear cover (Fig. F).
9. To change lamp, remove screws securing one of the end caps. Slide the clear cover, graphic transparency and acrylic diffuser out. Replace with identical lamp (see label on fixture). Reassemble fixture (Fig. F).
10. Apply the divider strips as needed to the acrylic diffuser (or the clear cover). Strips can be used to separate multiple transparencies used on the same sign (Fig. G).



Contents:




(3) Cord clips

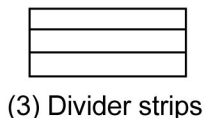


(3) Divider strips







(2) Plastic locking pins

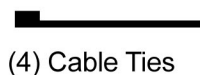

(4) Cable Ties

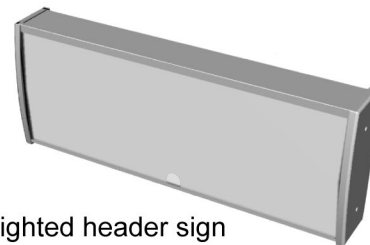

(1) Lighted header sign

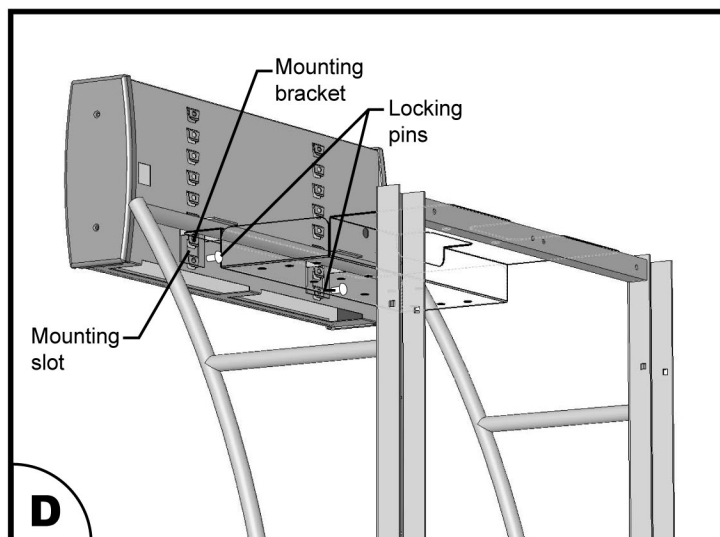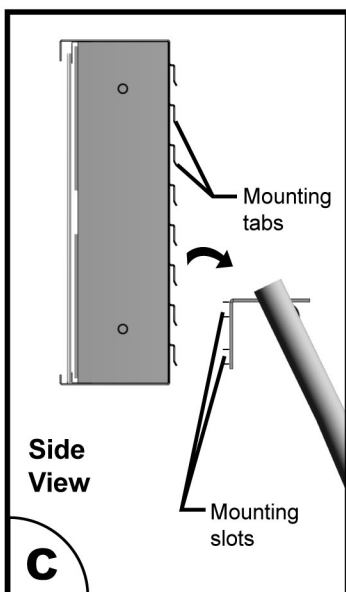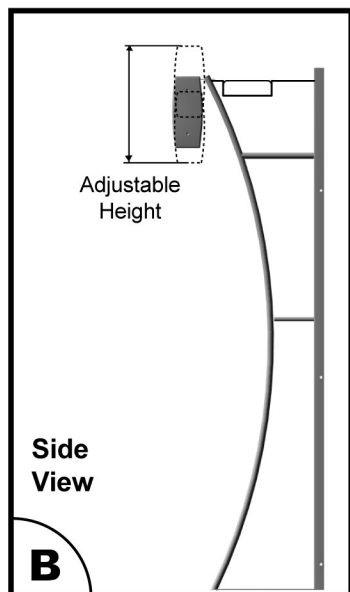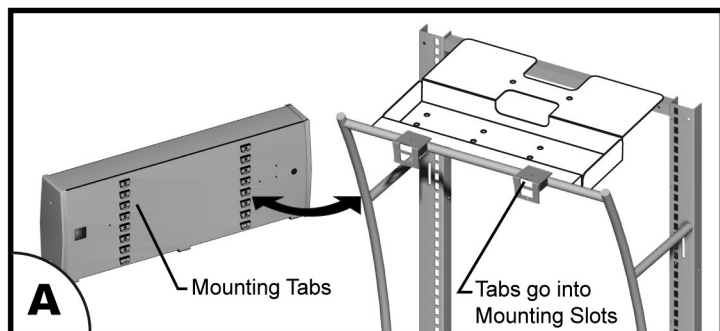



Warning: Unplug and turn off power before installing or servicing.

Warning: Do not overtighten cable ties. This will damage power cord insulation.

1. Determine required position for light to be mounted on metal fixture. Light can be adjusted up and down by selecting which mounting tabs are used (Fig. B). **Note: Normal setting is in the highest position.**
2. Hang the light on the metal fixture by engaging the selected light fixture mounting tabs in the mounting slots located on the metal fixture (Figs. A & C).

Warning: Failure to secure header results in an unsafe condition in which the light fixture could be knocked off the metal fixture resulting in injury.

3. Secure the light fixture onto the metal fixture by pushing the locking pins (2) through the holes in the mounting tabs and into the mounting bracket. Do this on both mounting brackets (Fig. D). Route power cord and secure with supplied cable ties and cord clips (see "[Power Cord Routing](#)" installation sheet).

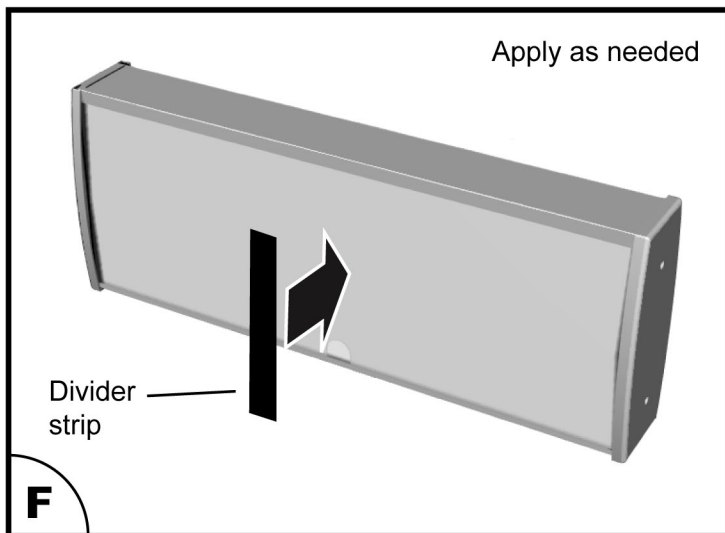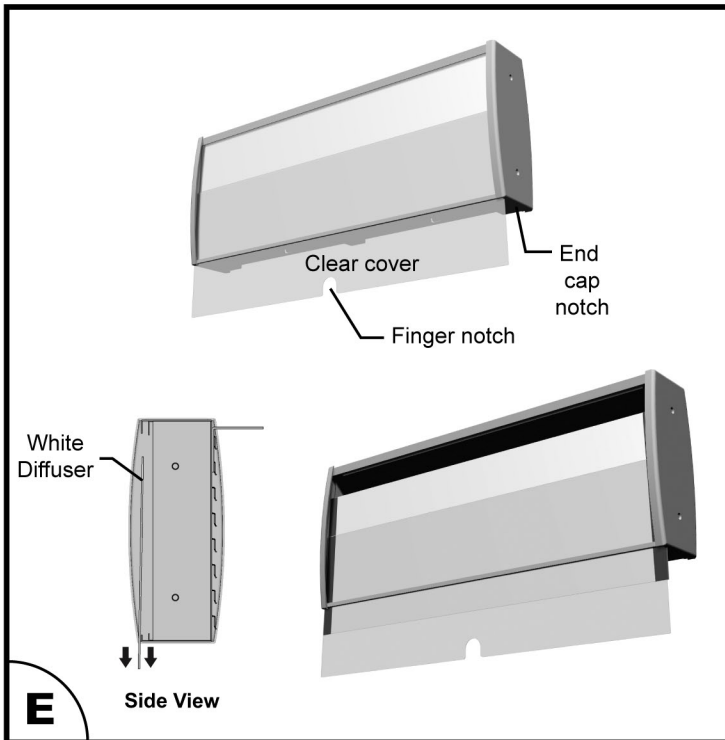

4. To install or change graphic transparency, lift clear cover by "finger notch". Then pull it forward slightly and lower through notch in the end caps. Slide graphic and clear cover back up in through end cap notches and drop into position (Fig. E).
5. To change the lamp(s), remove the clear cover, graphic transparency and white diffuser. You now have access to change the lamp(s). Replace with identical lamp (see label on fixture). Reinstall in opposite order (Fig. E).
6. Route power cord. See "[Power Cord Routing](#)" installation sheet.
7. Apply the divider strips as needed to the acrylic diffuser (or the clear cover). Strips can be used to separate multiple transparencies used on the same sign (Fig. F).



Specific power cord routing will be determined based on the mix of equipment being set and location of available outlets. However, the following guidelines should be followed.

- Place power strip in cord management tray.
- Each cabinet should be completely wired as a stand alone cabinet. This is most easily done before the low profile metal fixture section is placed on base. Power is then run from one cabinet to another by plugging one power strip into another power strip.
- Power cords from lighted flip signs should be routed up to the cord management trays behind the header signs.
- Plug Header Signs into power strip
- **All wires should be routed straight, horizontal, or vertical and tight. Never diagonal or loose.**
- Bundle excess wires and place in cord management tray
- Secure wires with cable ties and cord clips (included with lights).

Amperage Specifications: Flip Sign 0.28 amp
Header Sign 0.55 amp

Warning: Do not over tighten cable tie. This could damage power cord insulation.

Warning: Do not exceed amperage rating of power strip, outlet circuit breaker or Header Sign outlet.

Power Cord Routing Detail

