




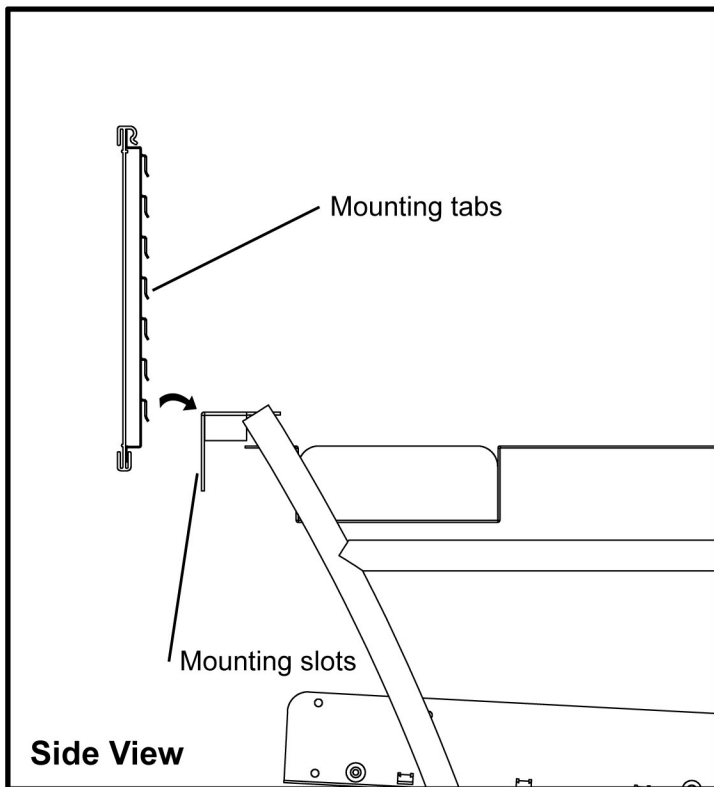

Non-Lighted Header Standard Sign

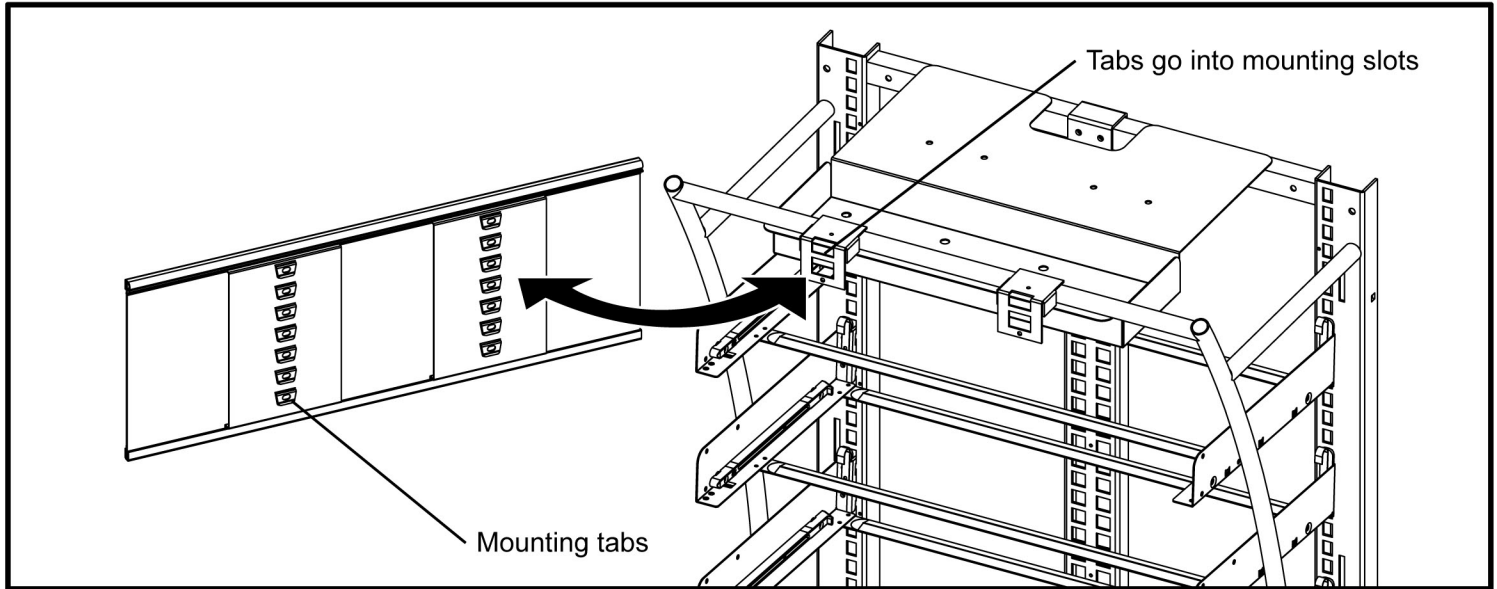

Hang the sign channel mounting brackets on the metal fixture by engaging the selected sign channel mounting tabs in the mounting slots located on the metal fixture. Push down on channel to secure mounting tabs in mounting slots. **Note: Normal setting is in the highest position.**

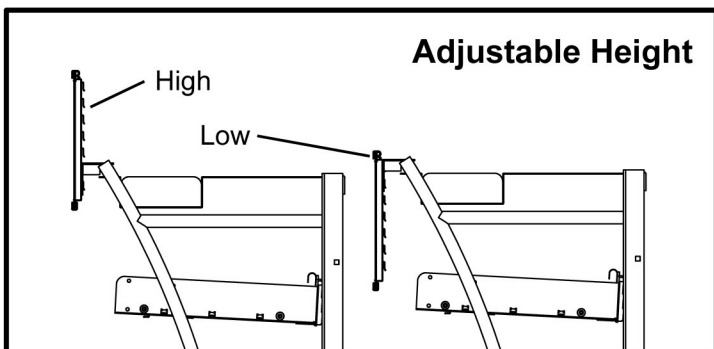





TheCstoreEstore.com

Questions? Call 866.630.2100

Non-Lighted Flip-Up Sign

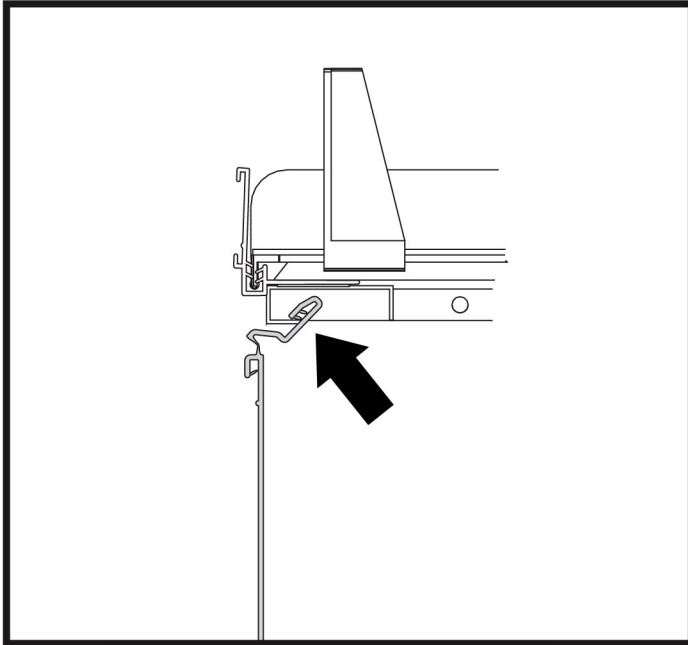

1. Hook sign channel onto metal flange located on bottom front of shelf.

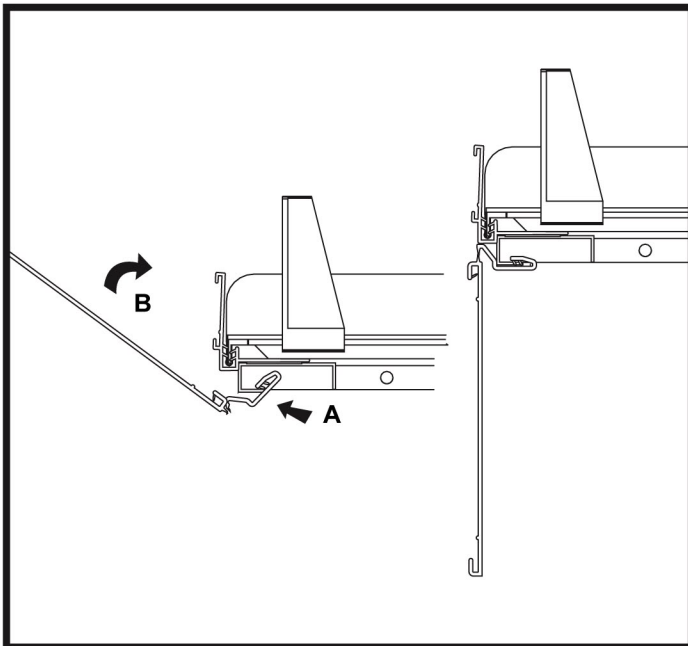

2. Starting from one end, pull gripper portion of flip sign onto metal flange (A) while rotating sign up (B). Continue until sign is securely attached.