# Shelving Installation

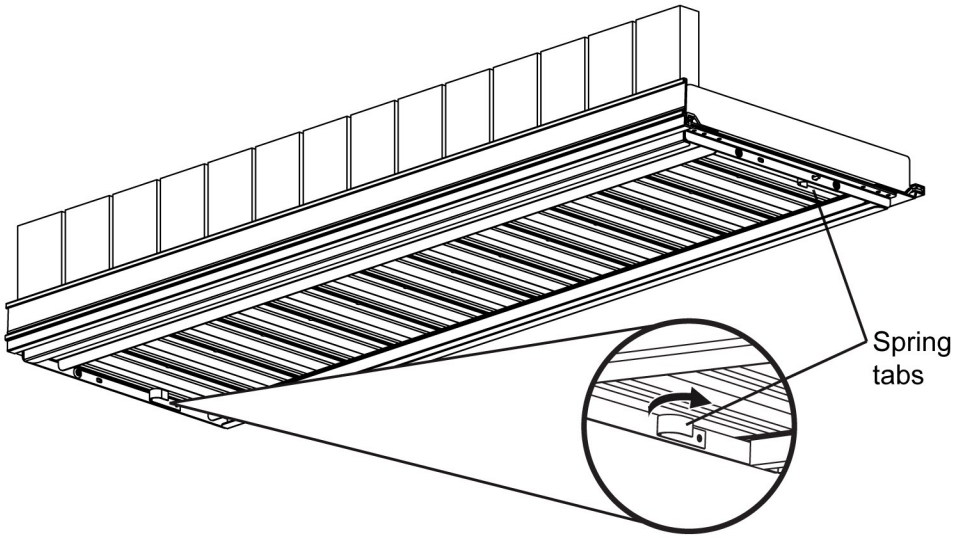


**1.** Locate spring tabs and pins on both sides of shelf bottoms.

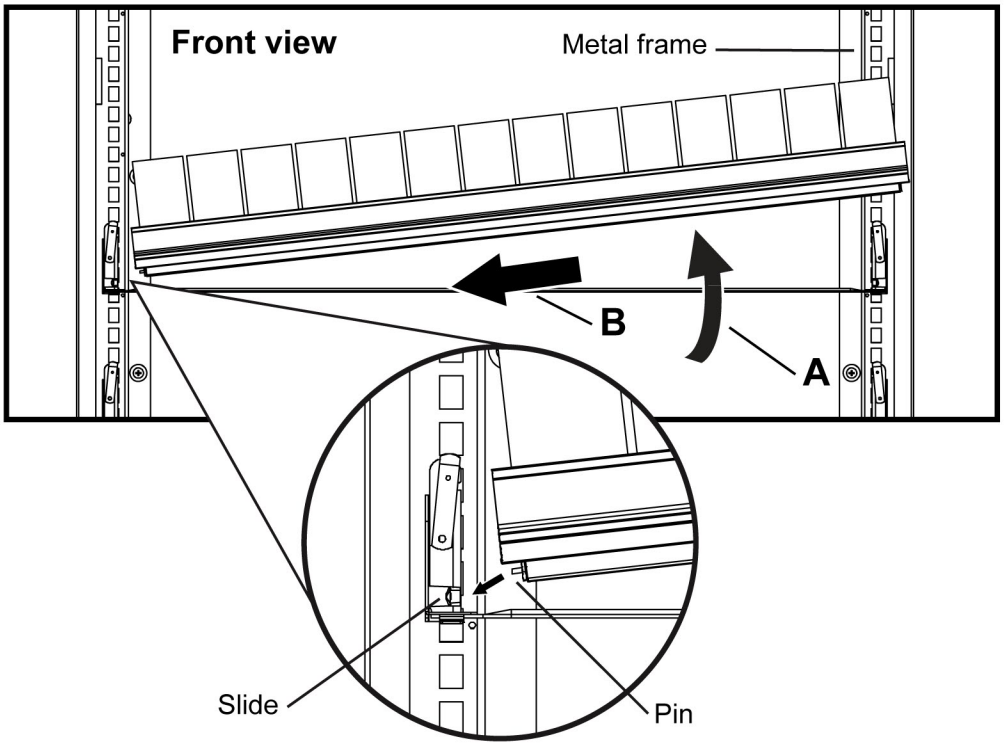


**2.** Rotate shelf so that pin engages groove in plastic slide.

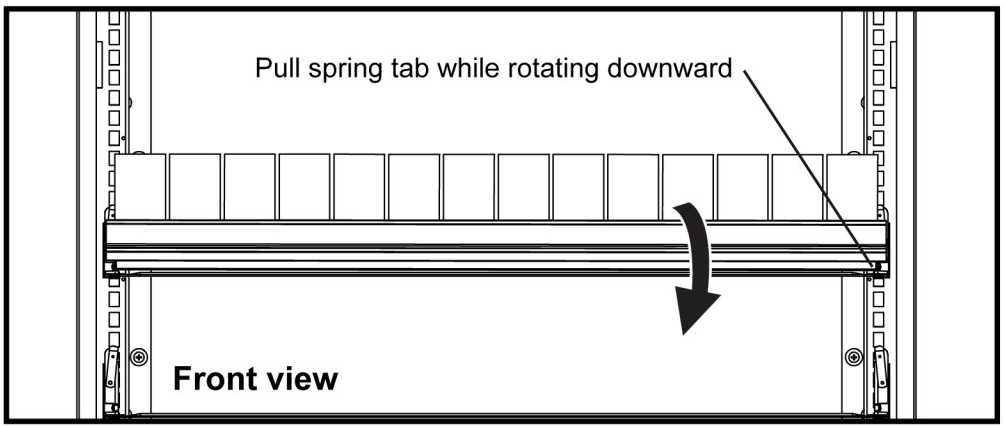


**3.** On opposite side of shelf, pull spring tab while rotating side of shelf downward.

# Adjusting Shelving

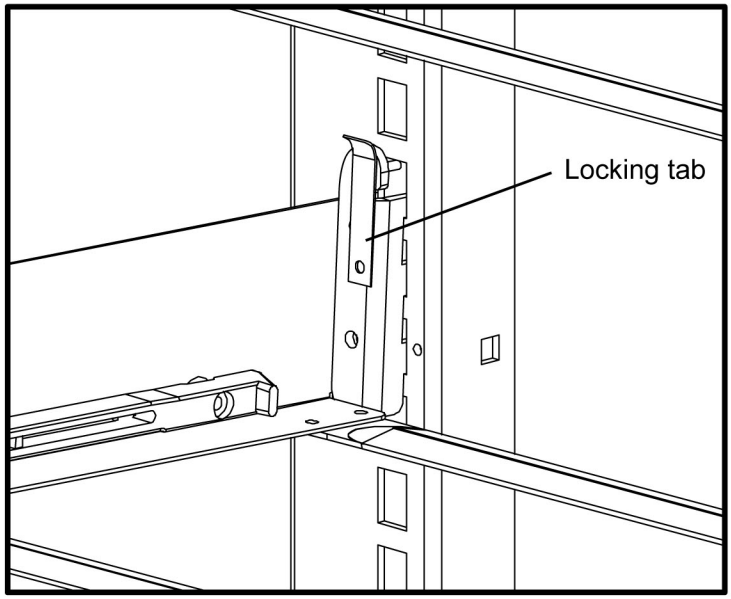


1. To adjust shelf support, gently pull back on locking tab untill pin is disengaged from slot. Do this on both sides of support.

2. Locking pin should automatically lock into place when inserting shelf support into new location.

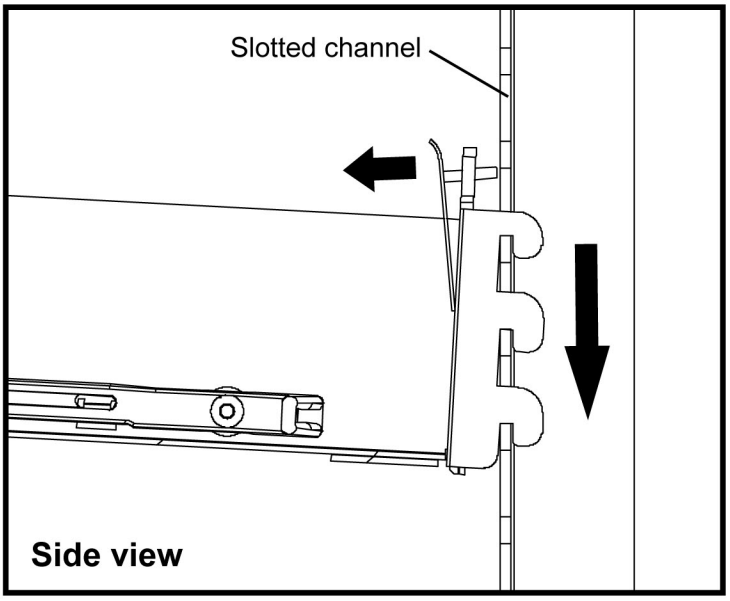


**Warning:** Make sure locking pin is engaged into slot. Test each shelf after installing to make sure it cannot be knocked loose. Failure to do so can result in an unsafe condition in which the shelf could be knocked off the metal fixture causing injury.

# Pusher Adjustment

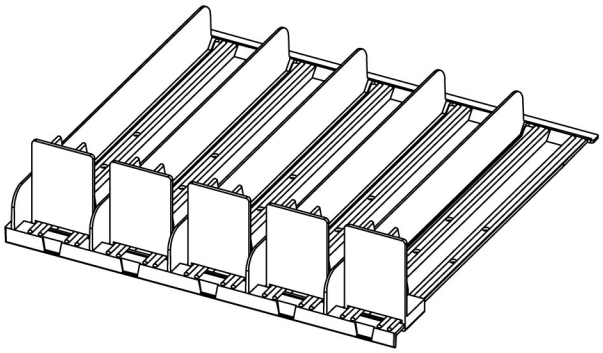

5-wide #702935

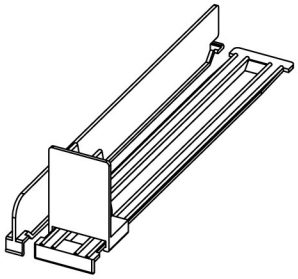

1-wide #702933
w/divider

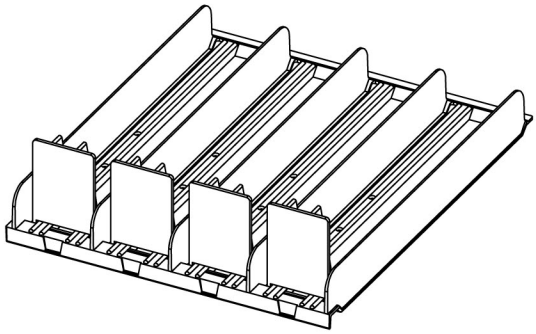

4-wide #702934

Note: Springload cartridges can be adjusted and removed.

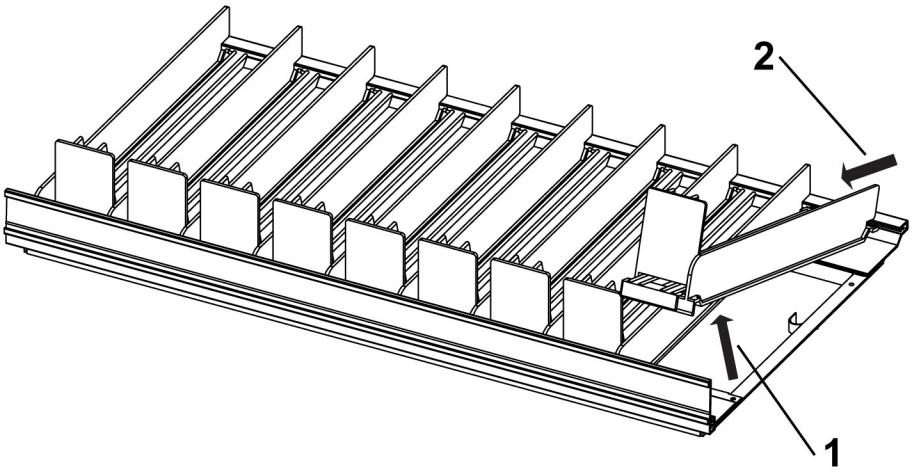


## To remove:

1. Pull up on front of pusher or divider.
2. Pull forward, out of rear channel.