


## **Pusher Kit Installation and Adjustment**

Note: Springload cartridges can be adjusted and removed.

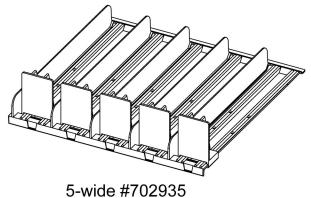

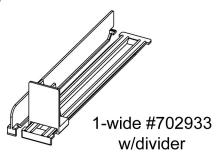

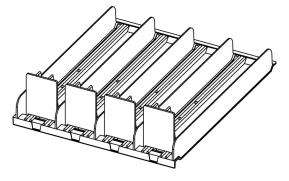

4-wide #702934

## To Install:

- 1. Peel away backing from self-adhesive tape on bottom of front and rear retaining strips.
- 2. Stick the retaining strips to the shelf (not included) spaced 8" apart (inside to inside as shown).
- 3. Insert rear tab of pusher/divider into rear retaining strip.
- 4. Push front tab of pusher/divider into front retaining strip.
- \*Adjust as necessary.

